



11662/11663 assembly instruction

2-1

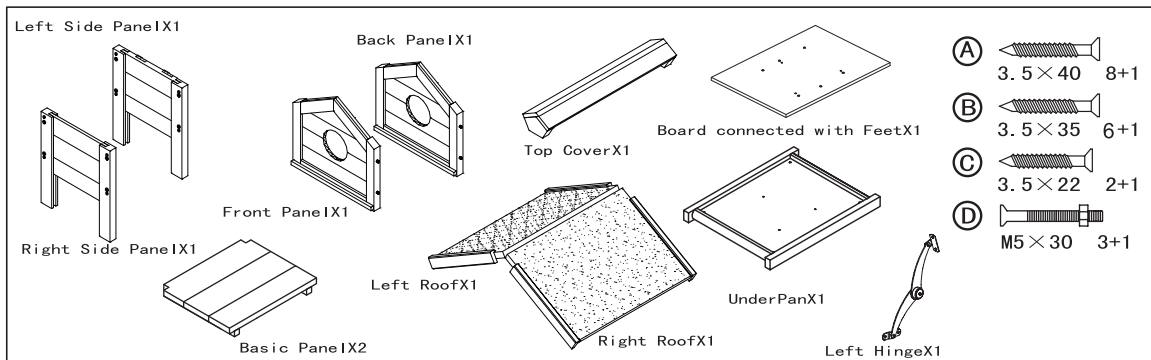


1

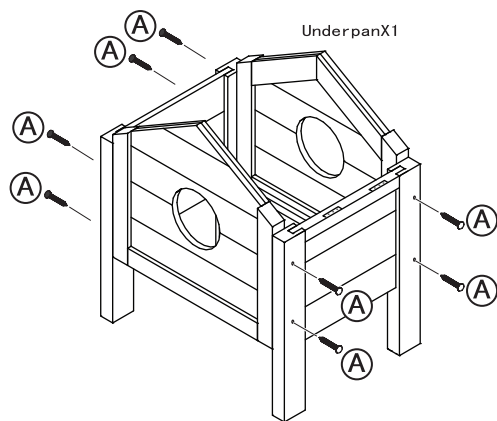


1. Assemble Front/Backpanel and 2 Sidepanels with ScrewA.

2

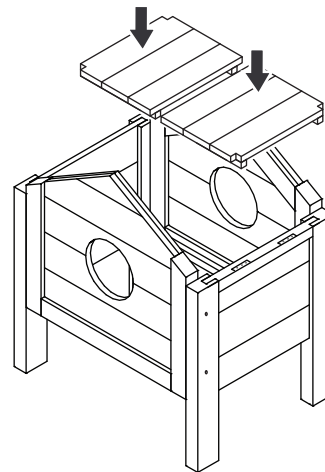


2. Put the Basicpanels according to the Arrowheads.

3

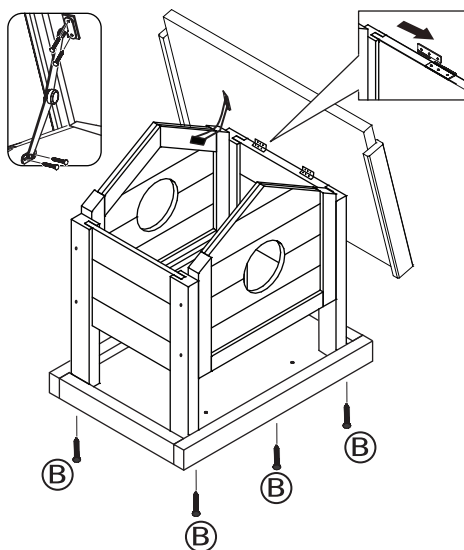


3. Assemble Underpan and Housebox with ScrewB.


4

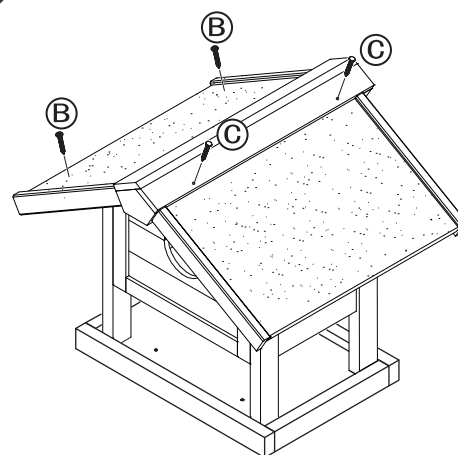

4. Assemble the Housebox and Roofs with ScrewB, then assemble the Topcover with ScrewC. Assembly is finished.

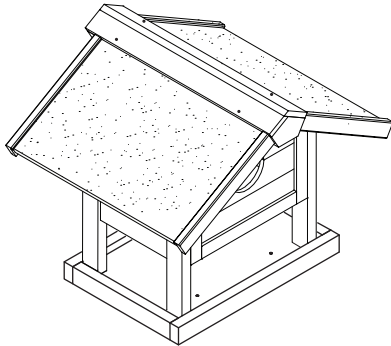


11662/11663 Housebox

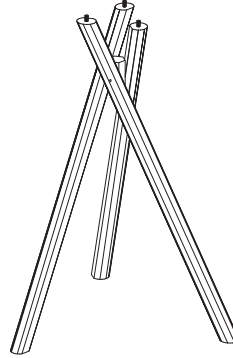


11664/2525 Supportfeet

1

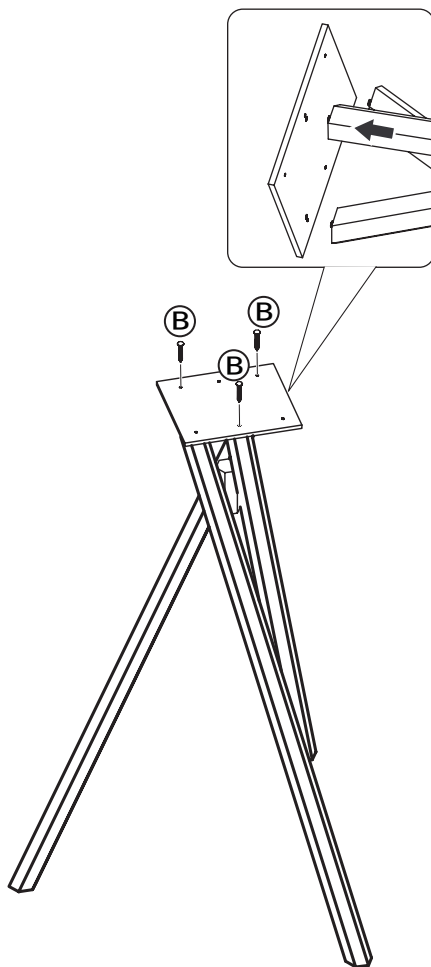

1. Assemble the Supportfeet & Board connected with Screw B.

2

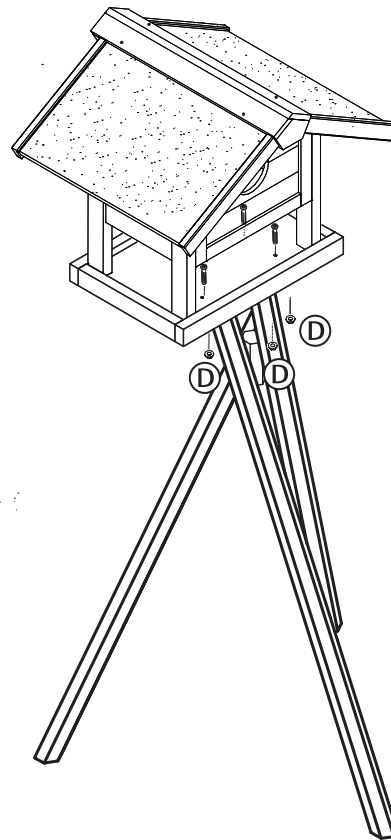

2. Assemble the Board connected Supportfeet and Housebox with Screw D. Assembly is finished.





Feet Axes Pillar x1



Supportfeet of Stand x3

- A

 $M6 \times 55$ 3+1
- B

 $\phi 3.5 \times 30$ 3+1

